



SCREW THREADED GRID CLIP INTO TOP OF BLADE TO INSTALL

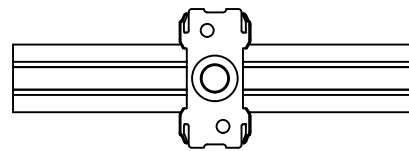


THREADED GRID CLIP SHOULD BE PERPENDICULAR TO THE TOP OF THE BLADE WHEN FULLY INSTALLED


2 3/16"
Minimum On Center
Blade Spacing

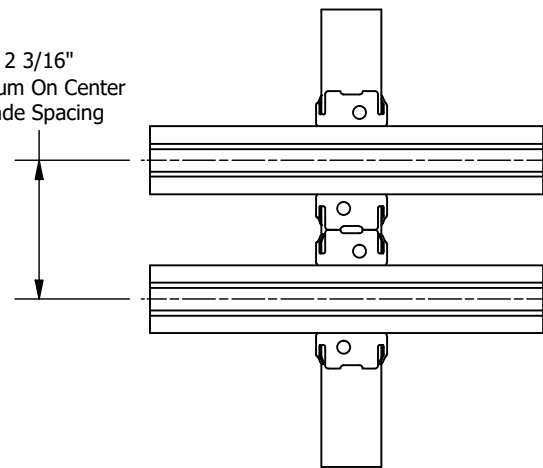


MIN OC BLADE SPACING

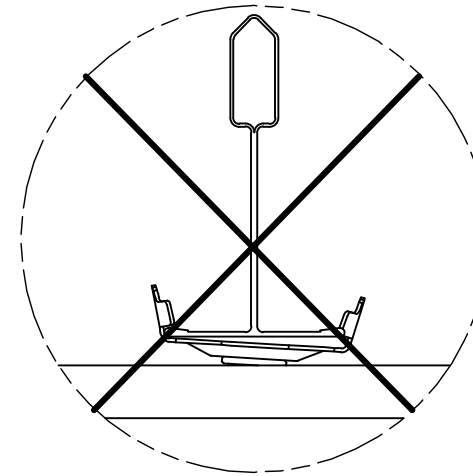


THREADED GRID CLIP IS NOT FULLY ENGAGED WITH GRID

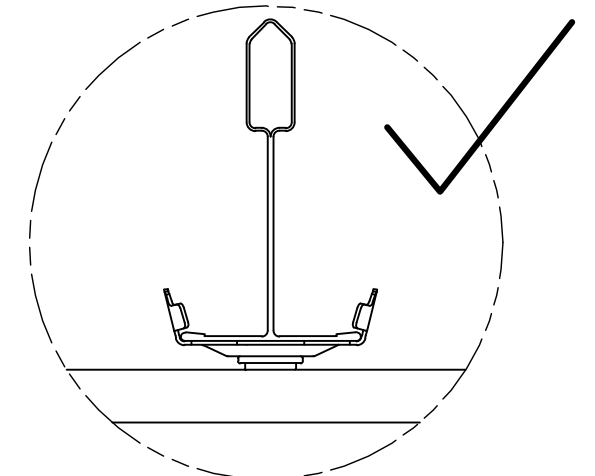


THREADED GRID CLIP IS FULLY ENGAGED WITH GRID

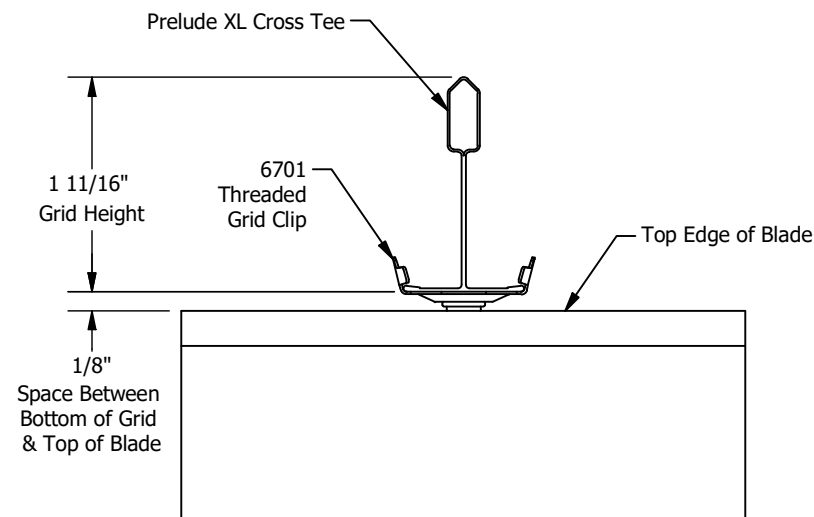


THREADED GRID CLIP NON-SEISMIC INSTALLED SIDE VIEW

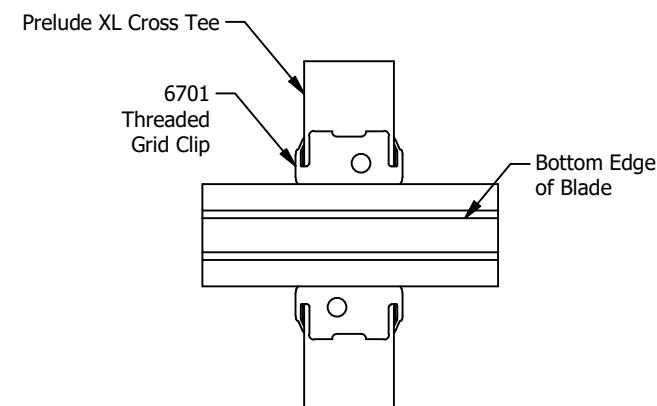

THREADED GRID CLIP NON-SEISMIC INSTALLED BELOW VIEW

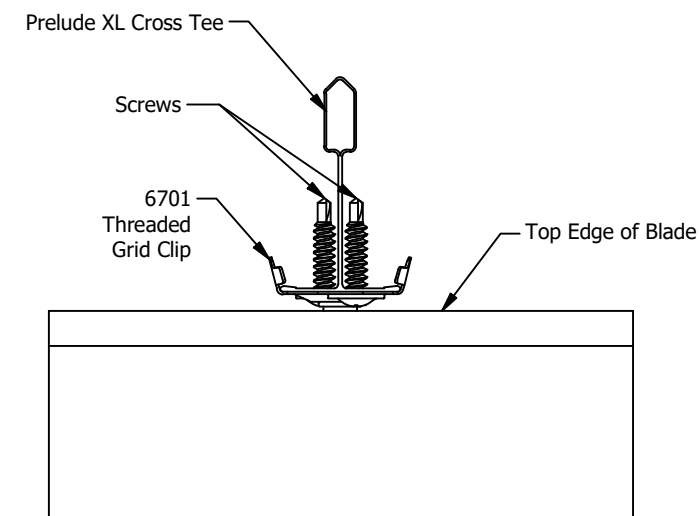

THREADED GRID CLIP SEISMIC INSTALLED SIDE VIEW

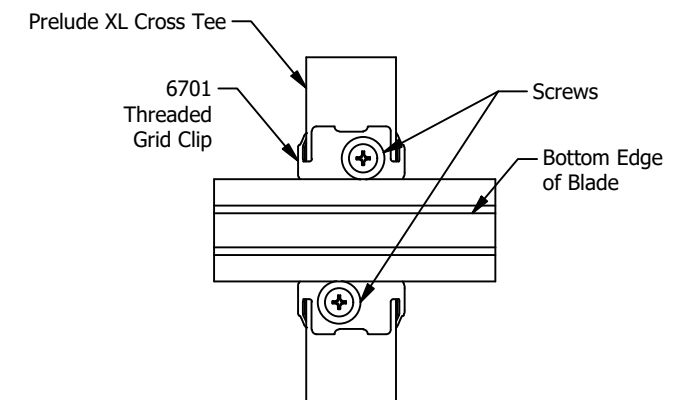

THREADED GRID CLIP SEISMIC INSTALLED BELOW VIEW



FeltWorks Blades VarAffix Threaded Grid Clip Installation Details

DRAWN BY: MAD DATE: 12/14/2022 PD

These drawings show typical conditions which the Armstrong products depicted are installed. They are not a substitute for an architect's or engineer's plan and do not reflect the unique requirements of local building codes, laws, statutes, ordinances, rules and regulations (Legal Requirements) that may be applicable for a particular installation. Armstrong does not warrant, and assumes no liability for the accuracy or completeness of the drawings for a particular installation or their fitness for a particular purpose. The user is advised to consult with a duly licensed architect or engineer in the particular locale of the installation to assure compliance with all legal requirements. Armstrong is not licensed to provide professional architecture or engineering design services.