

Installing Suspended Ceilings

Assembly and Installation Instructions

This ceiling system installation brochure is intended as a general application overview, covering essential steps of a basic suspended ceiling installation.



Armstrong® Ceiling System

The ceiling system is made up of Armstrong® Ceiling panels (either 2' x 4' or 2' x 2') which are supported by a suspension system (main beams, cross tees and hangers), and perimeter molding. The integrity of the entire suspended ceiling depends on the hangers – commonly wires – which are used to support the suspension system main beams. Sections of main beams are spliced together and are connected by cross tees. The ends of the main beams and cross tees rest on the wall molding which runs around the perimeter of the space.

Before You Start

Although temperature and humidity recommendations vary by product, the space must be cleared of debris and, in general, should be enclosed.

- The ceiling panels should be kept clean, dry, and protected from the elements. Panels should be removed from cartons 24 hours before installation to allow them to adjust to interior conditions.
- The tools you will need will vary depending on the type of hangers used, but generally, you will need:
 - ladders or scaffolding
 - a tape measure
 - pencil
 - chalk line
 - hammer
 - powder- actuated fastener
 - awl
 - pop-riquet gun
 - screw driver or drill
 - sheet metal punch
 - aviation snips
 - wire cutting pliers
 - utility knife
 - level (water level or laser)
 - string; key hole saw
 - and compass or dividers.

Most jobsites also require some safety equipment like a hard hat or safety glasses.




Main beams must be oriented perpendicular to bar or wood joists


DETERMINE PANEL DIRECTION

- Ceiling panels can run in the direction that yields the most pleasing finished appearance.
- In spaces with bar or wood joists, main beams must be oriented perpendicular to the joists. (You must locate and mark all joists if they have been covered with a drywall ceiling.)

DETERMINE BORDER PANEL SIZES (2' X 2' PANELS)

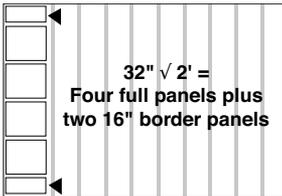

Determine width of border panels (2' x 2' panels)

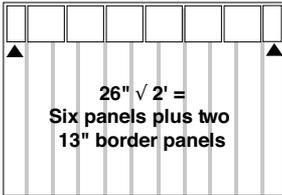


Determine width of border panels (2' x 2' panels)

- To determine the border panel sizes, divide one dimension of the space by 2'.
- Our example shows a space that is 10' 8" by 14' 2" and the deck joists run in the 10' 8" direction. $10' 8" \div 2' =$ five full panels + remaining 8".
- You can't start with a full panel against one wall and leave one 8" border on the other semi side; it will look unbalanced (and two border panels of 4" would be too small). So, add 24" to the 8" dimension, which equals 32". Divide that number by 2 to equal 16".
- The room would be divided into four full panels, plus two 16" border panels.
- In the other direction: $14' 2" \div 2' =$ seven panels + remaining 2".
- Add 24" to the 2" dimension, which equals 26". Divide that number by 2 to equal 13".
- This side of the room would have six full panels and two 13" border panels.

DETERMINE BORDER PANEL SIZES (2' X 4' PANELS)

- For 2' x 4' panels, divide one room dimension by 2' as stated above.
- Divide the other room dimension by 4' and add 48" to remaining dimensions to avoid unsightly small border panels.

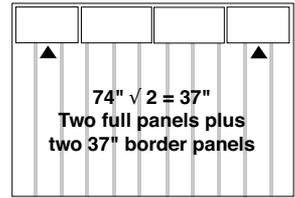


Determine width of border panels (2' x 4' panels)

INSTALL PERIMETER TRIM

- Allow at least three inches below the old ceiling, ducts, pipes or wiring as clearance to maneuver a lay-in panel into the opening of the grid.
- Mark the desired height for the new ceiling, adding the height of the wall molding. Mark a level line around all three walls and snap a connecting chalk line on the fourth wall.
- Attach the molding securely. Screws or 6d (1-1/2") nails work well for wood; use screws for metal; use powder-actuated fasteners or expanding anchors for concrete and stone walls. Joints between inside and outside corners of molding must be tight.



Mark desired height for new ceiling

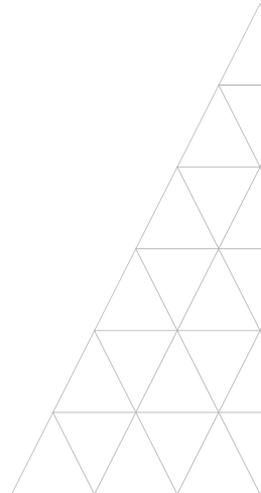

INSTALL HANGERS AND FASTENERS

- Hangers need to be installed above the main beams typically every four feet.
- Snap a chalk line for each of the main beams. Attach hangers and wires to the deck above the first row of main beams at four-foot intervals.
- Stretch a guide string from one end of the room to the other, below the molding where the first main beam will hang.
- Stretch a leveling string from one side to the other 7/8" above the bottom of the wall molding.
- Bend the wires at the height of the string so that the main beam is held at the correct height.
- Wrap hanger wire securely around itself three times.



Bend hanger wires at height of guide string



Install first main beam

INSTALL THE FIRST MAIN BEAM

- Install the first section of main beam. (Cut the end so that a cross tee route hole is located the border distance in from the end wall.)
- Insert a hanger wire into a hanger wire hole near the other end of the main beam. Bend the wire up and wrap it around itself three times. Continue to insert all other hanger wires.

INSTALL BORDER CROSS TEES


- Find the location of the first border cross tee.
- Place the end of the white face of the cross tee against the edge of the wall molding at the side, and cut the cross tee where it crosses the guide string.
- Insert the uncut end of the cross tee into the main beam, and rest the cut end of the cross tee on the molding. (The far edge of the main beam should be directly above the string.)
- Repeat the process for the next cross tee.
- Temporarily fasten the cross tees to the wall molding so they do not move.



Install border cross tees

SQUARE THE GRID

- Join additional sections of main beam as required to reach the other end wall. Attach hangers and check level as the installation proceeds.
- Use leftover piece of main beam from the first row to start the next row.
- Install two four-foot cross tees between the two main beams, in line with the first two border cross tees.
- Measure across the diagonals of the 2" x 4" opening. The measurements will be the same if the grid is square. If the grid is not square, shorten one of the main beams until the diagonals are equal.

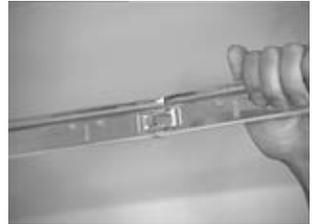

Join sections of main beam



Square the grid by measuring across the diagonal of the grid opening



Align second guide string with first four-foot cross tee

INSTALL REMAINING MAIN BEAMS AND CROSS TEES

- Complete the installation of rows of main beams.
- **NOTE:** If you have additional rows of main beams to install, stretch a second string from one side of the room to the other, aligning it with the first four-foot cross tee as shown.
- This second string will be your guide for cutting the remaining rows of main beams. Just measure from the end wall to the string to determine the distance for the first cross tee slot you will use.
- You must line up all cross tee slots for the grid to be square.



Tilt panels above frame and drop into place

INSTALL PANELS

- Slightly tilt panels, lift above framework, and gently rest on cross tee and main beam edges.
- Measure and cut border panels individually. Using a leftover cross tee or main beam section as a straight edge, cut panels face up with a very sharp utility knife. Border panels may require field cutting of Tegular edge details. All field cut edges “exposed to view” should be colored to match the factory finish. **Armstrong® SuperCoat™ Ceiling Panel Touch-up Paint is recommended.**



Tegular-edge border panels may require field cutting. Cut border panels face up and paint edges

LIGHTING AND OTHER FIXTURES

Lighting and other fixtures must be supported by the grid, not by the ceiling panels. Depending on the size and weight of the fixtures, extra hangers may be required.

For more information and details about installing Armstrong Suspended Ceilings, call your local Armstrong representative or visit armstrong.com/ceilings.



Grid may require extra hangers to support weight of lighting fixtures

TAKE THE NEXT STEP

1 877 276-7876

Customer Service Representatives
7:45 a.m. to 5:00 p.m. EST
Monday through Friday

TechLine – Technical information, detail drawings, CAD design assistance, installation information, other technical services – 8:00 a.m. to 5:30 p.m. EST, Monday through Friday. FAX 1 800 572 8324 or email: techline@armstrongceilings.com

armstrongceilings.com/commercial

Latest product news
Standard and custom product information
Online catalog
CAD, Revit®, SketchUp™ files
A Ceiling for Every Space® Visual Selection Tool
Product literature and samples – express service or regular delivery
Contacts – reps, where to buy, who will install

YOU INSPIRE™ SOLUTIONS CENTER

1 800 988 2585
email: solutionscenter@armstrongceilings.com
armstrongceilings.com/youinspire

Design Assistance

Collaborative design
Detail drawings
Specifications
Planning and budgeting

Pre-construction Assistance

Layout drawings for standard and premium products
Project installation recommendations
Contractor installation assistance

you inspire™
solutions center

helping to bring your one-of-a-kind ideas to life

Inspiring Great Spaces® is a registered trademark of AFI Licensing LLC
All other trademarks used herein are the property of AWI Licensing Company and/or its affiliates

© 2020 AWI Licensing Company • Printed in the United States of America

BPLA-3592-820

Armstrong®
CEILING SOLUTIONS